



HOOX-LOC Wall Diagonal Corner Assembly


Step1:Slide top and bottom into hook groove on face frame.

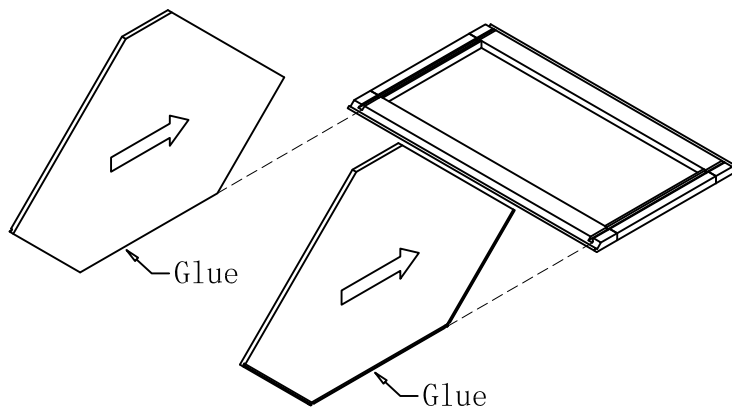

Step2:Slide side panels into hook groove on top and bottom.

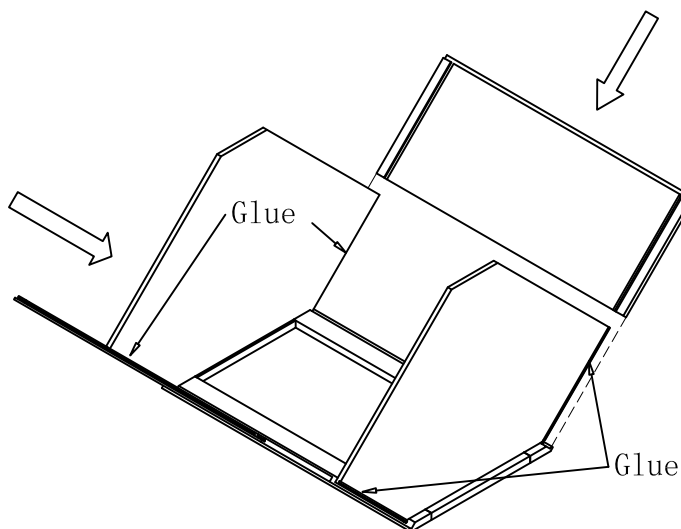


Step3:Install shelves.

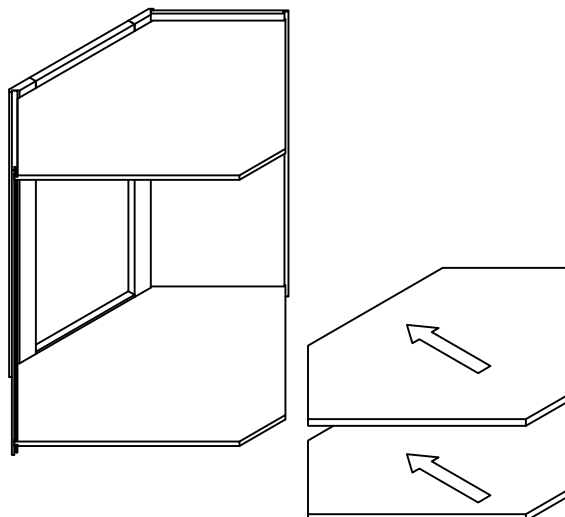


HOOX-LOC Base Diagonal Corner Assembly


Step4: Install corner back locking everything together screw into place .

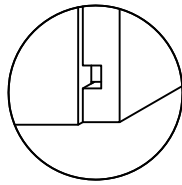

YES

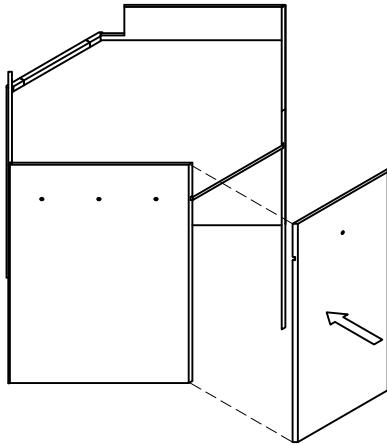


Step5: Install screws as show .

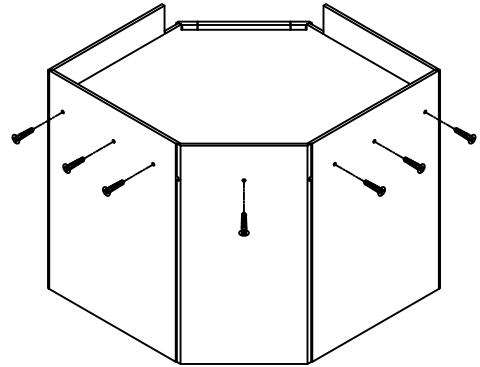


Step6: Install toe kick.

Insert

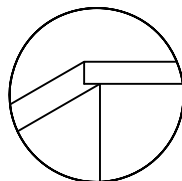

YES

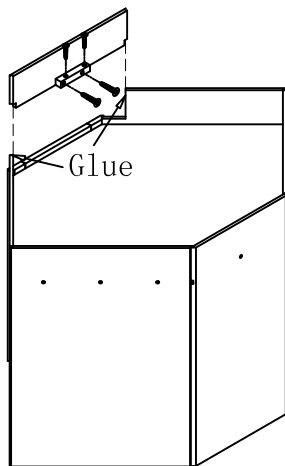

Step7:

- ⊙ Install angle wood blocks
- ⊙ Clean any excess glue.
- ⊙ Adjust doors.

